




BELL ENGINE FLUSH

BELL ENGINE FLUSH removes crankcase sludge during the oil change.

WHY USE BELL ENGINE FLUSH?

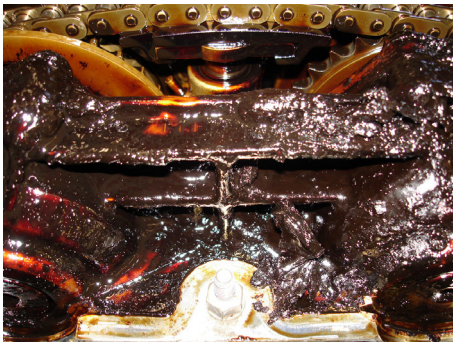

Don't let oil sludge ruin your engine.

Instead of adding new oil to a dirty engine, **BELL ENGINE FLUSH** allows new oil to be added to a clean crankcase. Sludge and collected particulates are removed instead of being circulated in the new oil; cleaner lubrication results and oil filter life is maximized.

Every time it is used, **BELL ENGINE FLUSH** helps:

- Removes accumulated oil sludge from engine lubrication system
- Keeps fresh oil cleaner longer
- Extends life of oil filter
- Promotes cleaner lubrication over the life of the oil
- Removes soot and particulate that may contribute to engine wear

BELL ENGINE FLUSH may be used in all gasoline and diesel engines, old and new.

Directions

Before changing oil and oil filter, add 12 oz. **BELL ENGINE FLUSH** to the crankcase.

Idle the engine for 5 minutes. **DO NOT DRIVE THE VEHICLE AT THIS TIME**, as the sludge and particulates are in process of being removed back into the dirty oil.

Change the oil and the oil filter as per normal.

Your crankcase is now clean and your engine now benefits from fresh, clean lubrication, thanks to **BELL ENGINE FLUSH**.

After removal of oil sludge, we recommend addition of **X-TRA LUBE OIL TREATMENT** with your oil change for the superior engine protection money can buy.



BECAUSE PERFORMANCE COUNTS.